


# **Anchor Holder**



# Anchor

## Removing the Anchor Holder

1. Remove anchor from holder.
2. Remove mounting screws.

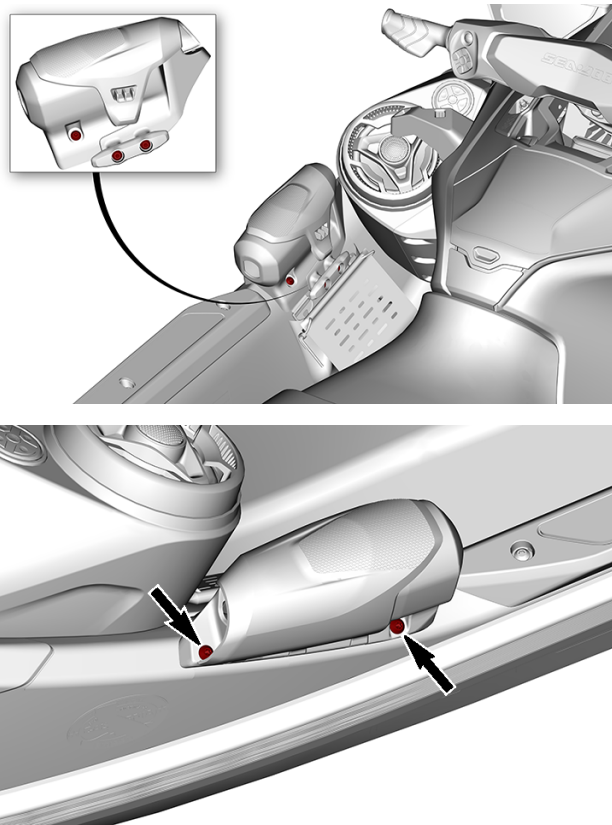

## Installing the Anchor Holder

The installation is the reverse of the removal procedure. However, pay attention to the following.

1. Tighten the screws to specification.

| Tightening Torque |                                            |
|-------------------|--------------------------------------------|
| M6 x 50           | $2.75 \pm 0.25$ Nm<br>( $24 \pm 6$ lbf-in) |