




◆ **WARNING :** For safety reasons, this kit must be installed by an authorized Bombardier Sea-Doo watercraft dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser after installation. This kit is designed for specific applicable models only. It is not recommended for watercraft other than those for which it was sold.

○ **NOTE :** Installation time is approximately: 0.5 hour.

PART TO BE INSTALLED

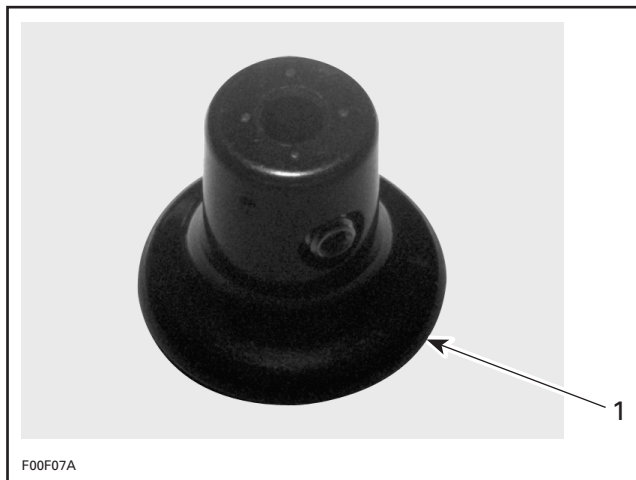


1. Choke Knob

Remove any remaining plastic material from end of choke cable.

File 1 mm (3/64 in) on rounded surface of cable end in order to obtain a flat surface.

Refer to the following illustration.

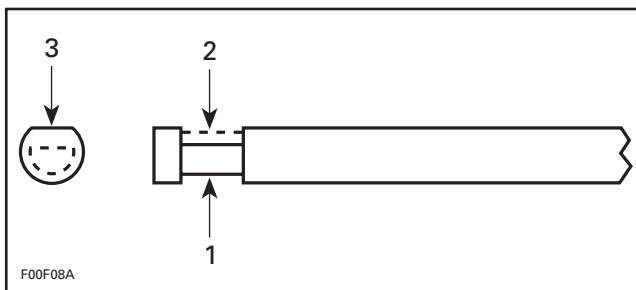

1. Slotted end of choke cable
2. File 1 mm (3/64 in)
3. View from end, after filing

Align hole on new choke knob with filed surface.

Install set screw in knob.

Tighten set screw to 0.2-0.3 N•m (1.8-2.7 lbf•in).

295 500 439

1.	277 000 643	Choke Knob	Bouton d'étrangleur
----	-------------	------------	---------------------