


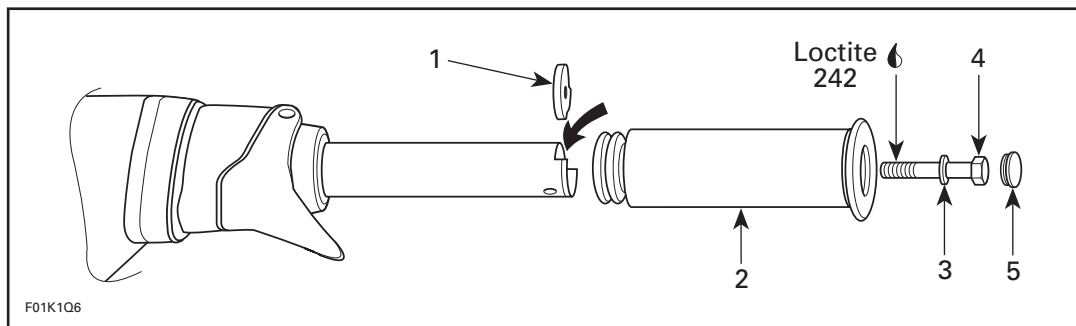

F01K1Q6

PARTS TO BE INSTALLED

1. Grip insert
2. Grip
3. Flat washer
4. Bolt
5. Cap

WARNING : For safety reasons, this kit must be installed by an authorized Bombardier Sea-Doo watercraft dealer. This kit is designed for specific applicable models only. It is not recommended for watercraft other than those for which it was sold. Torques must be specifically observed.

REMOVAL

To remove old grip, just pull out cap from grip end and remove bolt.

Pull off grip.

Remove grip insert.

INSTALLATION

Install grip insert no. 1 in handlebar tube.

NOTE : When installing the grip insert, rotate it to ensure that its notch is properly inserted in the hole beneath the handlebar. Refer to the illustration below.

WARNING : Do not install this type of grip if the handlebar end is not notched.

Install grip no. 2 on handlebar matching it to the U form on the handlebar.

Apply Loctite 242 (blue) on threads of bolt no. 4.

Install flat washer no. 3 and bolt no. 4 ; torque bolt to 6 N•m (53 lbf•in).

Install cap no. 5.

PIÈCES À INSTALLER

1. Verrou de poignée
2. Poignée
3. Rondelle plate
4. Boulon
5. Capuchon

AVERTISSEMENT : Pour des raisons de sécurité, ce nécessaire doit être installé par un concessionnaire autorisé de motomarines Bombardier. Ce nécessaire a été conçu pour des modèles particuliers. Il n'est pas recommandé de l'installer sur les embarcations autres que celles pour lesquelles il a été vendu.

DÉPOSE

Pour retirer la poignée déjà en place, enlever le capuchon de l'extrémité de la poignée et enlever le boulon.

Enlever la poignée.

Enlever le verrou de poignée.

INSTALLATION

Installer le verrou de poignée n° 1 dans le tube du guidon.

REMARQUE : Lors de son installation, tourner le verrou de poignée et s'assurer que son encoche est bien insérée dans le trou situé sous le guidon. Se référer à l'illustration ci-dessous.


AVERTISSEMENT : Ne pas installer ce type de poignée s'il n'y a pas d'encoche à l'extrémité du guidon.

Installer la poignée n° 2 sur le guidon de manière à ce qu'elle se marie à la forme en U du guidon.

Appliquer du Loctite 242 (bleu) sur les filets du boulon n° 4.

Installer la rondelle plate n° 3 et le boulon n° 4. Serrer ce dernier à 6 N•m (53 lbf•po).

Installer le capuchon n° 5.

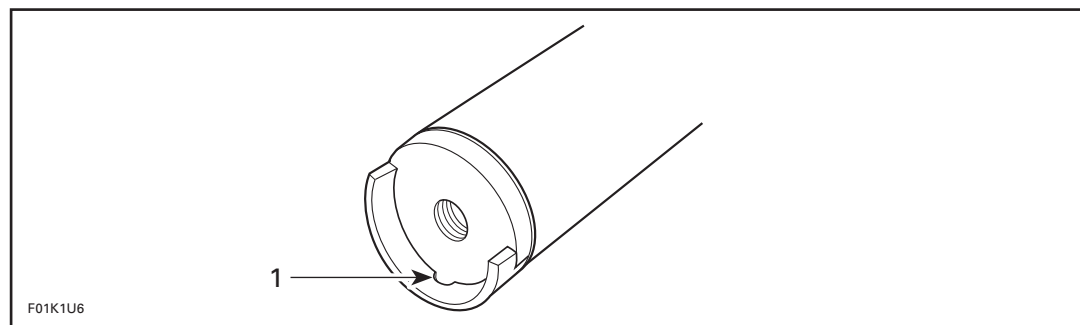

F01K1U6

1. Notch inserted in handlebar hole

1. Encoche insérée dans le trou du guidon