



SEA-DOO®


Jet Boats and Watercraft

MIRROR KIT
(P/N 295 500 380 RH SIDE)
(P/N 295 500 333 LH SIDE)
REVISION 1

◆ WARNING

For safety reasons, this kit must be installed by an authorized Bombardier Sea-Doo or Sea-Doo jet boat dealer. Should removal of a locking device be required when undergoing disassembly/assembly, always replace with a new one. This instruction sheet should be given to the purchaser after installation. This kit is designed for specific applicable models only. It is not recommended for boats other than those for which it was sold.

PARTS TO BE INSTALLED

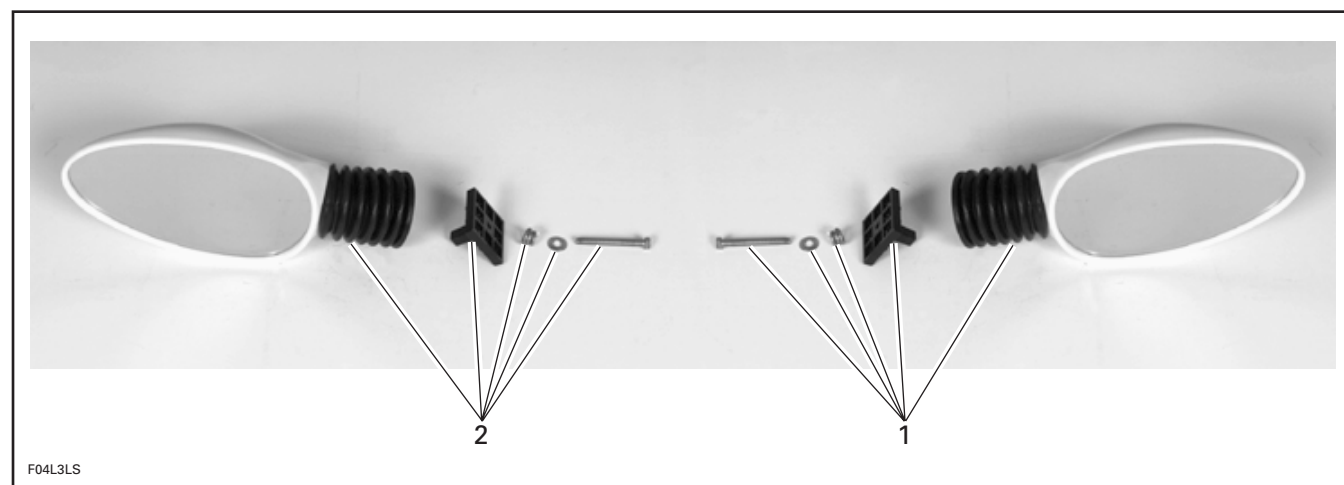

1. Right Side Mirror (kit 295 500 380)
2. Left Side Mirror (kit 295 500 333)


INSTRUCTIONS

NOTE: The following procedure is given for the left side mirror. The same procedure and measurements apply also for the right side. Both mirrors have an inscription on them (such as: OBJECTS IN MIRROR ARE CLOSER THAN THEY APPEAR).

PREPARATION FOR WATERCRAFT


Open storage cover and remove basket.

From the center of the fuel valve, measure 171 mm (6-47/64 in) and trace a vertical line on the body.

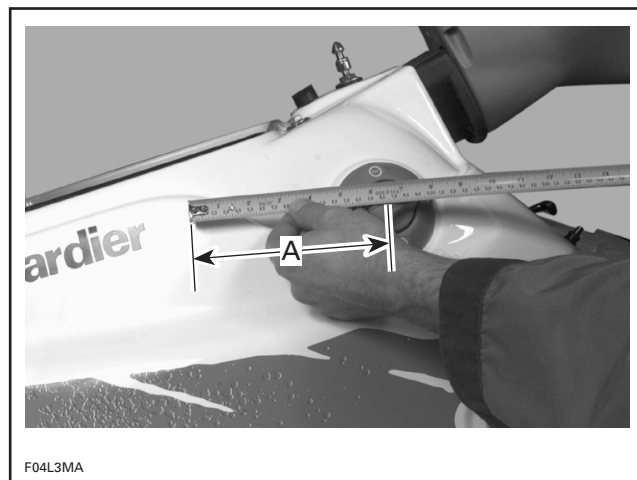

A. 171 mm (6-47/64 in)

- ➡ Place a straight edge across the opening of the storage area. From there, measure 65 mm (2-1/2 in) perpendicularly (squarely) and trace an horizontal line that crosses the previous line.

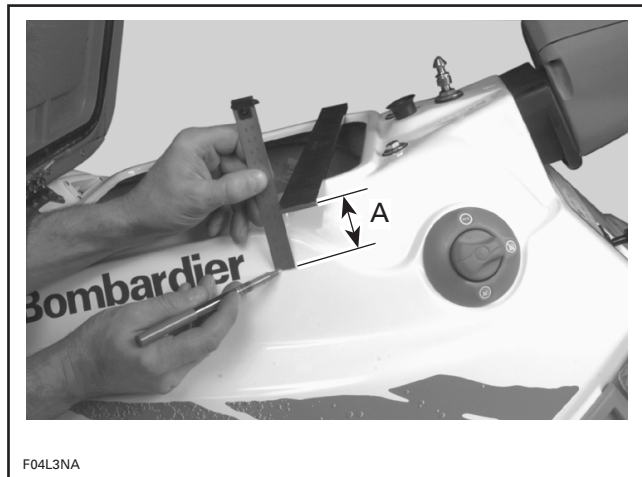


- ➡ A. 65 mm (2-1/2 in) perpendicularly

▼ CAUTION

Prior to drilling: Move electrical wires away inside the bilge. From the outside, place the mirror's backing plate over the drilling marks. Figure if the plate will clear the curvature inside the body. Lower the drilling marks accordingly.


PREPARATION FOR JET BOATS

From the end of storage cover, perpendicularly measure 43 mm (1-11/16 in) and trace a line.

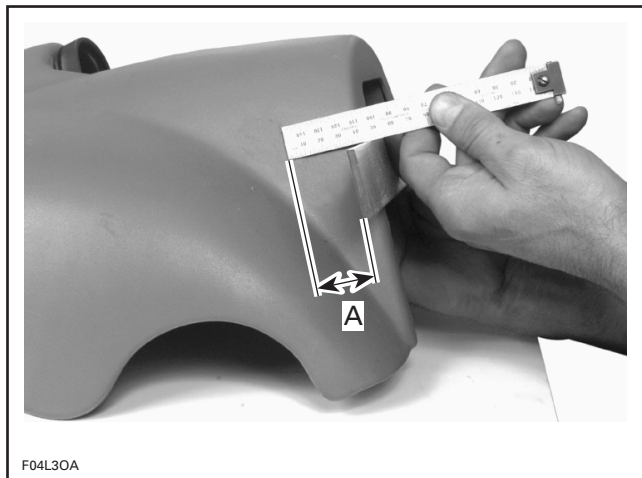

- A. 43 mm (1-11/16 in)

From the curved area, measure 20 mm (13/16 in) and trace a line that crosses the previous line.

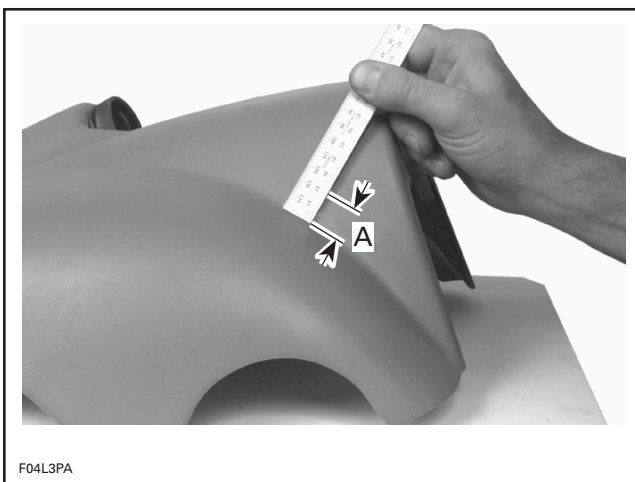

- A. 20 mm (13/16 in)

Lift storage cover and use tape to hold it open.

ALL CRAFTS

Drill a pilot hole of 3 mm (1/8 in) on traced marks then redrill to 11 mm (7/16 in).

Remove burrs.

Position mirror then from the inside, install the backing plate, the spring, the washer and the screw respectively.

Properly tighten screw.

▼ CAUTION

Ensure to not squeeze the protective rubber.

Reinstall basket (watercraft) and close storage cover.

295 500 380
295 500 333

1.	291 000 896	Right Side Mirror (kit 295 500 380)	Miroir droit (nécessaire 295 500 380)
2.	291 000 769	Left Side Mirror (kit 295 500 333)	Miroir gauche (nécessaire 295 500 333)