




◆ **WARNING :** For safety reasons, this kit must be installed by an authorized Bombardier Sea-Doo watercraft dealer. Should removal of a locking device be required when undergoing disassembly / assembly, always replace with a new one. This instruction sheet should be given to the purchaser after installation. This kit is designed for specific applicable models only. It is not recommended for watercrafts other than those for which it was sold.

○ **NOTE :** Installation time is approximately 0.5 hour.

PARTS TO BE INSTALLED

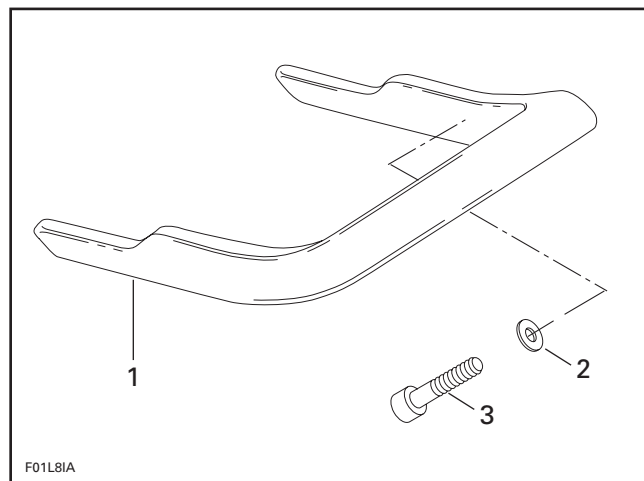

1. Rear Grab Handle
2. Flat Washer (4)
3. Allen Screw (4)

INSTALLATION PROCEDURE

Turn engine off.

Remove seat.

Properly install template found at the end of this instruction sheet.

Follow instructions on template as indicated.

Drill 4 holes in body using a 17.5 mm (11/16 in) drill bit.

▼ **CAUTION :** After drilling operation, remove fiberglass debris from engine compartment.

Install rear grab handle **no. 1** using flat washers **no. 2** and Allen screws **no. 3**. Apply Loctite 242 (blue) on screw threads.

Torque screws to 6 N•m (50 lbf•in).

Reinstall seat.

THIS PAGE IS PURPOSELY BLANK

Use this template on both sides of watercraft body.

